

Recommended Maintenance Intervals

Vacuum Pumps - Lubricated



Maintenance Intervals on Becker U 4.000 Series Pumps

Weekly

- *Check and clean intake filters if necessary.
- *Check oil level in each pump. Fill while pump is not running.
- * Clean oil cooler, blow off with compressed air 45 psi max.

Every 500 Hours

- *Check and clean air intake filters. Replace if Necessary.
- *Check discharge oil separators. Replace if Necessary.
- *Change oil.

Every 2000 Hours

- *Replace oil separators and oil sump gasket if unchanged.

Every 3000 to 4000 Hours

- *Inspect motor coupling. Replace if necessary.

Maintenance Intervals on Becker U 1.16 SA Series Pumps

Weekly

*Check oil level in each pump. Fill while pump is not running.

Every 500 Hours

*Check and clean air intake filters. Replace if Necessary.

*Check discharge oil separators. Replace if Necessary.

*Change oil.

Every 2000 Hours

*Replace oil separators and oil sump gasket if unchanged.

Maintenance Intervals on Becker U 2.70 SA Series Pumps

Weekly

*Check oil level in each pump. Fill while pump is not running.

Every 500 Hours

*Check and clean air intake filters. Replace if Necessary.

*Check discharge oil separators. Replace if Necessary.

*Change oil.

Every 2000 Hours

*Replace oil separators and oil sump gasket if unchanged.

Every 3000 to 4000 Hours

*Inspect motor coupling. Replace if necessary.

Maintenance Intervals on Becker U 2.100 SA Series Pumps

Weekly

*Check oil level in each pump. Fill while pump is not running.

Every 500 Hours

*Check and clean air intake filters. Replace if Necessary.

*Check discharge oil separators. Replace if Necessary.

*Change oil.

Every 2000 Hours

*Replace oil separators and oil sump gasket if unchanged.

Every 3000 to 4000 Hours

*Inspect motor coupling. Replace if necessary.

Maintenance Intervals on Becker U 2.165 SA Series Pumps

Weekly

*Check oil level in each pump. Fill while pump is not running.

Every 500 Hours

*Check and clean air intake filters. Replace if Necessary.

*Check discharge oil separators. Replace if Necessary.

*Change oil.

Every 2000 Hours

*Replace oil separators and oil sump gasket if unchanged.

Every 3000 to 4000 Hours

*Inspect motor coupling. Replace if necessary.

Maintenance Intervals on Becker U 2.190 SA Series Pumps

Weekly

*Check oil level in each pump. Fill while pump is not running.

Every 500 Hours

*Check and clean air intake filters. Replace if Necessary.

*Check discharge oil separators. Replace if Necessary.

*Change oil.

Every 2000 Hours

*Replace oil separators and oil sump gasket if unchanged.

Every 3000 to 4000 Hours

*Inspect motor coupling. Replace if necessary.

Maintenance Intervals on Becker U 2.250 SA Series Pumps

Weekly

*Check oil level in each pump. Fill while pump is not running.

Every 500 Hours

*Check and clean air intake filters. Replace if Necessary.

*Check discharge oil separators. Replace if Necessary.

*Change oil.

Every 2000 Hours

*Replace oil separators and oil sump gasket if unchanged.

Every 3000 to 4000 Hours

*Inspect motor coupling. Replace if necessary.

Maintenance Intervals on Becker U 3.6 SA Series Pumps

Weekly

*Check oil level in each pump. Fill while pump is not running.

Every 500 Hours

*Check and clean air intake filters. Replace if Necessary.

*Check discharge oil separators. Replace if Necessary.

*Change oil.

Every 2000 Hours

*Replace oil separator.

Maintenance Intervals on Becker U 3.10 SA Series Pumps

Weekly

*Check oil level in each pump. Fill while pump is not running.

Every 500 Hours

*Check and clean air intake filters. Replace if Necessary.

*Check discharge oil separators. Replace if Necessary.

*Change oil.

Every 2000 Hours

*Replace oil separators and oil sump gasket if unchanged.

Every 3000 to 4000 Hours

*Inspect motor coupling. Replace if necessary.

Maintenance Intervals on Becker U 3.25 SA Series Pumps

Weekly

*Check oil level in each pump. Fill while pump is not running.

Every 500 Hours

*Check and clean air intake filters. Replace if Necessary.

*Check discharge oil separators. Replace if Necessary.

*Change oil.

Every 2000 Hours

*Replace oil separators and oil sump gasket if unchanged.

Every 3000 to 4000 Hours

*Inspect motor coupling. Replace if necessary.

Maintenance Intervals on Becker U 3.40 SA Series Pumps

Weekly

*Check oil level in each pump. Fill while pump is not running.

Every 500 Hours

*Check and clean air intake filters. Replace if Necessary.

*Check discharge oil separators. Replace if Necessary.

*Change oil.

Every 2000 Hours

*Replace oil separators and oil sump gasket if unchanged.

Every 3000 to 4000 Hours

*Inspect motor coupling. Replace if necessary.